

Thank you for purchasing the **SmartStopStart Auto-Stop Disable Module!**
We are confident that you will be pleased with it.

Please read this important information and keep this document with your vehicle owner's manual.

Easy Installation Instructions

1. Open the hood: Make sure your vehicle is turned off, in PARK and the doors are unlocked. Pull the hood release lever on the lower left side of the instrument panel.




Then, from the front of the vehicle, find the secondary hood release handle. The handle is under the front edge of the hood near the center. Push the handle to the right and raise the hood.




2. Look at the front of the vehicle under the hood. Locate the black, purple and grey plastic connector above the radiator and **BEHIND** the front ledge. (**NOTE:** On 2019 models the connector is black and red).



3. Slide the gray plastic locking piece on the connector about 1/8" (3 mm) away from the connector body until it stops. (**NOTE:** On 2019 models the connector is black and red).


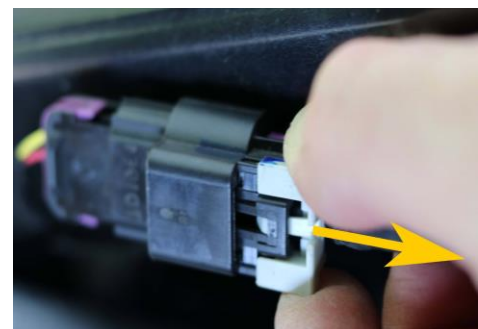


4. Depress the black plastic lever FIRMLY while pulling the connector shells apart.
-On 2018 models (shown) the black lever is in the center between the gray arms of the locking piece.
-On 2019 models the black lever is above the red locking piece.
The connector halves will separate.

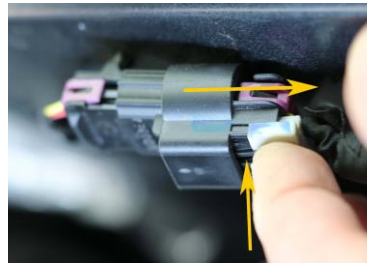


5. Plug the module in between the two separated connector halves in the vehicle.

Push each connector pair firmly together until they engage with a click. Then slide both grey locking pieces (red for 2019 models) on the connectors left into the locked position.

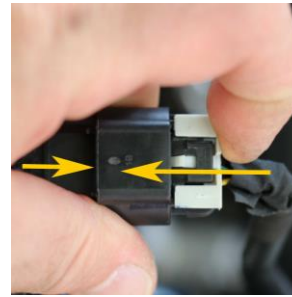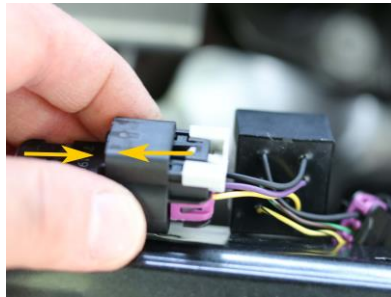

6. Next, using the supplied large tie-wrap, to affix the module in place to the outer ledge above the radiator as shown in the photo to the right. The tie wrap is threaded as follows in steps 6a through 6c:

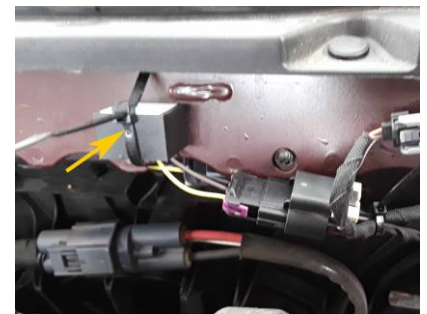


6a. Locate the cable harness from the hood latch where it enters the latch from below the ledge. Thread the large tie wrap UP through this same hole until it emerges from beside the hood latch.



6b. Pull the cable tie about halfway through the opening next to the hood latch.



6c. Thread the cable tie under the black ledge cover until it emerges on the other side. Now wrap it around the Auto-Stop module, between the two rows of three wires and secure the cable tie. Snip off the excess cable tie.

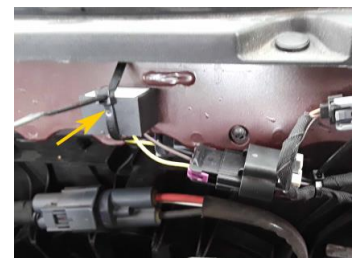

7. Secure the remaining loose wiring with a small cable tie.



8. Close the hood.

9. All done! Auto-stop is now disabled the next time you start the vehicle. The module does not affect normal operation of the vehicle when started using the Ignition button, except that it will prevent the Auto-Stop feature from engaging.

If your car has the **Remote Start** option and you use it, you must read the next section for changes in operation when using the **Remote Start** feature.

Important Instructions for vehicles with the Remote Start Option

(If you do not have or do not ever use the Remote Start feature, this section can be skipped).

If your vehicle has the Remote Start option (either from the key fob or from the *MyChevrolet* mobile App) there are **three** changes in operation of Remote Start that you should know and understand with the Auto-Stop Override installed. For most owners, these changes will be easy to adapt to.

1. **Remote Start will only now work when the car is 'sleeping':** Typically the vehicle 'goes to sleep' 10 to 20 minutes after the ignition is shut off, or the car is locked or the door is shut without locking the car. This means that you need to wait at least that amount of time after the last drive. If you do not wait for the car to sleep, Remote Start will not work and might also set off the security alarm (pressing LOCK or UNLOCK will cancel the alarm). Manually start the car instead if you have not waited enough time between drives for the car to sleep.
2. **Remote Start Fast button press sequence is now required:** When initiating Remote Start with the key fob, after you **QUICKLY** depress the key fob LOCK button you must begin pressing the Remote Start button **IMMEDIATELY** (and hold it for at least 4 seconds as usual). If you hold the LOCK button too long, or do not press these buttons in very quick succession the Remote Start may fail and it might also set off the security alarm (pressing LOCK or UNLOCK will cancel the alarm). If the Remote Start fails, do not attempt it again for 20 minutes since it will not work. Manually start the car instead for this drive.
3. **After remote start, manually cycle Ignition off and on to activate Auto-Stop Override:** When you enter the vehicle after Remote Starting, you still first press the ignition button as you did before. **Then YOU ALSO SHOULD CYCLE the ignition OFF and then ON AGAIN manually one time. THIS MUST BE DONE FOR THE AUTO-STOP OVERRIDE MODULE TO ACTIVATE AFTER A REMOTE START, otherwise Auto-Stops will not be overridden during this drive.**

Removing the module

If you ever want to restore the Auto-Stop feature, simply remove the module and plug the original connectors back together. We suggest that you remove the module and reconnect the original connectors prior to bringing the vehicle in for service. This will avoid potentially confusing the service technician.

(Per the Magnusson-Moss Warranty Act in the US, a manufacturer or dealer can only deny a warranty claim when an aftermarket component is installed if the dealer or manufacturer can prove that the aftermarket component caused the fault in question.)

Spare tie-wraps have been included to make it easy to re-install the module in a couple of minutes or so.